



## Installing iMac Intel 21.5" RAM

### Tools used in this guide

- [Phillips #1 Screwdriver](#)
- [Spudger](#)

### Parts relevant to this guide

- [PC3-8500 4 GB RAM Chip](#)
- [PC3-8500 2 GB RAM Chip](#)
- [PC3-8500 1 GB RAM Chip](#)



### Step 1 - Access Door


- Loosen the three Phillips screws securing the access door to the bottom edge of your iMac.
- These screws will remain captive in the access door.
- Remove the access door from your iMac.
- During reassembly, fasten the access door loosely and align it with the pocket cut into the outer case of the iMac before fully tightening the screws.





### Step 2 - RAM

- Use the sharp tip of a spudger to pull the black plastic RAM tabs out of the memory bay.

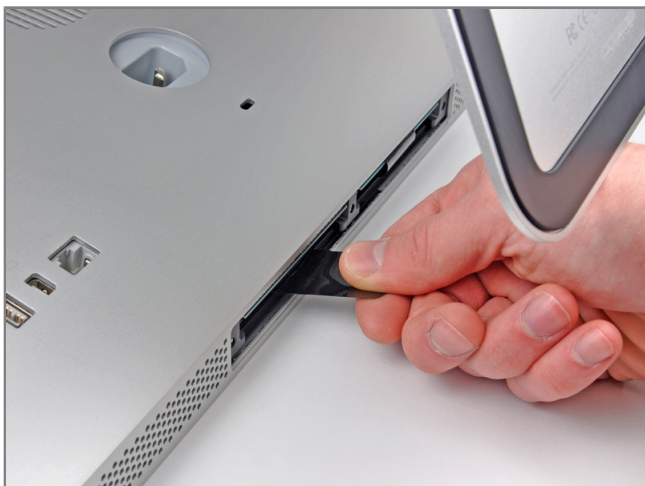

### Step 3

- Pull the black plastic RAM tab away from your iMac to eject the RAM chip.
- Grab the RAM chip by its edges and pull it straight out of its slot.
- If two RAM chips are installed, repeat this process for the other chip.

